 


DVD 1

## Guide



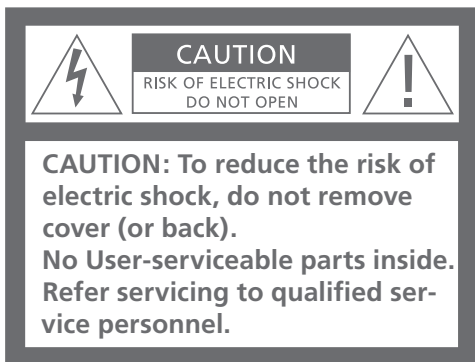

**WARNING:** To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

***For the US market only:***

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the retailer or an experienced radio/TV technician for help

***For the Canadian market only:***

CAUTION: To prevent electric shock do not use the polarized plug, attached to this apparatus, with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

**Set up DVD 1, 4**

Find out how to handle, place and set up your product. This chapter also contains an overview of the socket panel.

**Introducing DVD 1, 8**

Find out how to use the Beo4 remote control and the close-up operation panel.

**Daily use, 10**

Find out all there is to know about the daily use of your product, including how to play, cue and wind through a DVD, pause and stop playback, change chapters and play an audio CD.

**Preference settings, 12**

Find out how to enter or change, for example, settings for language, picture, sound and Parental Control.

**On-screen menus, 14**

Overview of the on-screen menus.

**Maintenance, 18****Index, 20**

## Set up DVD 1

Follow the guidelines and procedures on these pages when setting your DVD 1 up for the first time.

### DVD 1 placement guidelines

 
Place DVD 1 on a solid, level surface. Do not place any items on top of DVD 1.

Place DVD 1 away from radiators and direct sunlight.

Do not place DVD 1 on a carpeted surface, as carpet blocks the ventilation holes in the base.

DVD 1 is intended for indoor use in dry, domestic environments only, with a temperature range of 10–35°C (50–95°F).

*Condensation can occur if DVD 1 is moved from cold to warm surroundings. This may interrupt playback. Before using DVD 1, let the player stand someplace warm for one to two hours, until the moisture evaporates.*


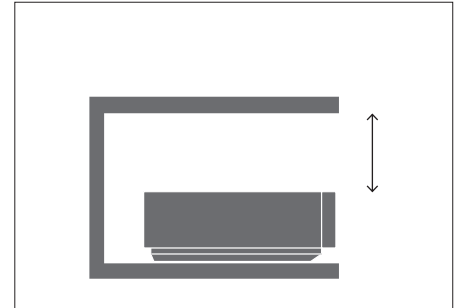


*To ensure proper ventilation, allow for at least 5 centimetres (2") of space at the sides of DVD 1 and 10 centimetres (4") above it.*

## Connect DVD 1 to your television

  DVD 1 is constructed for connection to a Bang & Olufsen television via a 21-pin AV cable, but other cables are used in some countries. If 21-pin AV cables are not used in your country, then you can follow the procedure described below to connect DVD 1 to your Bang & Olufsen television. For an overview of the DVD 1 socket panel, please refer to page 6.

*Register all equipment connected to your TV system, including DVD 1. This is done via your television's 'Setup' menu. Refer to the User's Guide included with your Bang & Olufsen television to ensure proper connection and registration of extra equipment.*

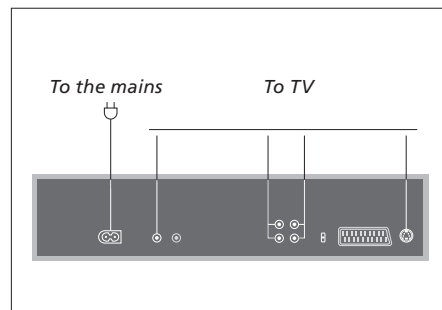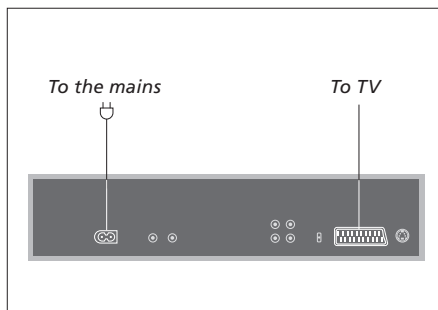

### Connection using a 21-pin AV cable...

- > Connect the socket marked AV on DVD 1 to the socket marked AV on your television via the 21-pin AV cable.
- > If your television is equipped with a built-in Dolby Digital module, connect the socket marked DIGITAL OUTPUT on DVD 1 to the INPUT 1 socket on your television. If the required cable is not enclosed, it is available from your Bang & Olufsen retailer.
- > Set the switch marked Y/C-RGB-CVBS on the rear of DVD 1 to the correct position:
  - CVBS**  
This switch setting is used when you connect DVD 1 to an AV 9000, BeoVision LX, BeoVision MS, or BeoVision MX 4000/4002/6000/7000 television.
  - Y/C**  
This switch setting is used when you connect DVD 1 to a BeoVision Avant 50 Hz television.
  - RGB**  
This switch setting is used when you connect DVD 1 to any other Bang & Olufsen television.
- > Finally, connect your DVD 1 to the mains with the enclosed cable. Your DVD 1 is now in stand-by mode – indicated by the red light in the display panel.

 
### Connection without a 21-pin AV cable...

Follow the procedure below to connect your DVD 1 to your Bang & Olufsen television:

- > Connect the CTRL socket on DVD 1 to the CTRL socket on your television.
- > Connect the S-VIDEO socket on DVD 1 to the S-VIDEO socket on your television.
- > Connect the VIDEO socket on DVD 1 to the VIDEO socket on your television.
- > Connect the DIGITAL OUTPUT socket on DVD 1 to the COAX socket on your television.
- > Connect the LINE OUT L and LINE OUT R sockets for left and right channel audio output on DVD 1 to the L and R sockets on your television.
- > Finally, connect your DVD 1 to the mains with the enclosed cable. Your DVD 1 is now in stand-by mode – indicated by the red light in the display panel.

You can connect DVD 1 to your television via the socket panel on the rear of DVD 1.

Please consult the User’s Guides enclosed with externally connected equipment to ensure that it is connected in the proper manner.

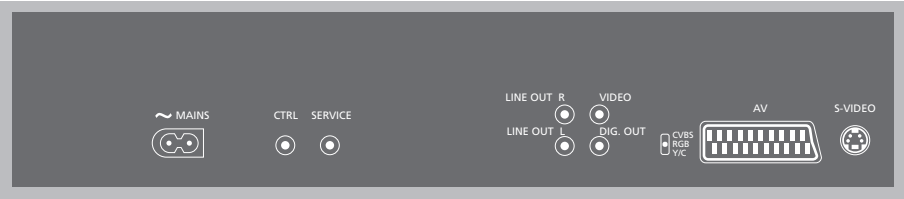

**Overview of the rear socket panel**

**~ (mains)**  
Socket for connection to the mains.

**SERVICE**  
For use by qualified service personnel only.

**LINE OUT R      VIDEO**  
**LINE OUT L      DIG. OUT**  
Audio signals are sent from DVD 1 to your television via these four sockets. All four sockets are used when you connect DVD 1 to a Bang & Olufsen television which does not use a 21-pin video cable. The DIGITAL OUTPUT socket is also used when connecting DVD 1 to any Bang & Olufsen television equipped with a Dolby Digital surround sound module.

**AV**  
21-pin socket for connection to the Bang & Olufsen television.

**CTRL      S-VIDEO**  
Video signals are sent from DVD 1 to your television via these sockets. The sockets are used to connect DVD 1 to a Bang & Olufsen television which does not use a 21-pin video cable.

**The switch options**

**CVBS**  
This switch setting is used when you connect DVD 1 to an AV 9000, BeoVision LX, BeoVision MS or BeoVision MX 4000/4002/6000/7000 television.

**Y/C**  
This switch setting is used when you connect DVD 1 to a BeoVision Avant 50 Hz television.

**RGB**  
This switch setting is used when you connect DVD 1 to any other Bang & Olufsen television.

## Set up DVD 1 with your particular television...

This procedure will ensure that your DVDs are played with the proper picture format, regardless of the type of television you have. DVD 1 must be switched on before you perform this 'once only' operation.

Press LIST on Beo4 until V.SETUP\* appears in the Beo4 display

**LIST**

V.SETUP

Press GO to display TUNE

**GO**

TUNE

Press 1 if your DVD 1 is connected **1**  
*directly* to a television from the BeoVision MX-series (i.e. 4000/4002, 6000/7000)

Press 2 if your DVD 1 is connected **2**  
to a BeoVision MX via an AV2 Expander box, or if it is connected to any other Bang & Olufsen television

Press GO to store the setup

**GO**

### \*Add V.SETUP to Beo4...

Before you can set up DVD 1 to the correct television type, you must add one 'button' to the Beo4 remote control; V.SETUP is needed to set up DVD 1.

 
- > Hold the **•** button while pressing LIST.
- > Now, let go of both buttons.
- > Press **LIST** until ADD? appears in the display.
- > Press **GO** to call up the list of 'buttons' to add from.
- > Press **LIST** until V.SETUP is displayed.
- > Press **GO** to add the 'button'. ADDED appears in the Beo4 display and you leave the setup function.

*You only need the V.SETUP 'button' once and can therefore remove it after setting up DVD 1, if you wish. This is done by repeating the procedure described above, selecting REMOVE? instead of ADD?.*

## Introducing DVD 1

In this chapter, you will find instructions explaining how to gain access to DVD 1 functions via the close-up operation panel on the front of DVD 1 and via the Beo4 remote control.

The close-up operation panel allows you to load and unload discs, to start, pause or stop playback, to cue forward or backward on a disc or to view the elapsed playing time.

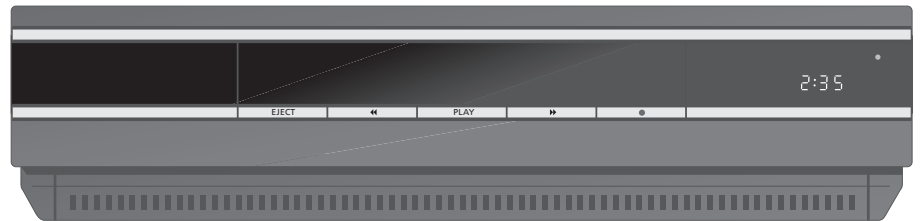

### To load a disc...

- > Press **EJECT** on the close-up operation panel.  
The loader slides out.
- > Place a disc in the loader. For information about valid disc formats, refer to 'Play other disc formats' on page 11.
- > Press the **DVD** button on Beo4 or **PLAY** on the close-up operation panel to close the loader and start playback.

*You can load a disc for playback at a later time.*

*Press **EJECT** from stand-by mode, place a disc in the loader, and press **EJECT** again. DVD 1 will remain in stand-by mode.*

### The close-up operation panel

#### EJECT

Press to open or close the loader.



Press to cue backward or forward during playback.

#### PLAY

Press to start playback. Press again to pause playback at the current still picture or audio track.

#### • (Stand-by)

Press to switch DVD 1 to stand-by mode. Stops playback without switching to standby if pressed during playback or pause mode.

#### DISPLAY

The display to the right shows the elapsed playing time of a DVD or the current track number being played on an audio CD. Switching DVD chapters causes the appropriate chapter number to be shown in the display for a few seconds.



## Use the Beo4 remote control

Use the Beo4 remote control to operate DVD 1. The functions activated by the particular buttons are described below.

*Some functions require you to press GO, followed by a particular key. For example, to bring up the DVD player menus, you must press GO, followed by 3. Other functions can be activated directly.*

*The display window shows you the current source or function.*

- Press GO, followed by...**
- 1** to bring up the disc's own top menu – if your disc has one
  - 2** to zoom in on the picture
  - 3** to bring up the DVD player menus
  - 4** to bring up the status display
  - ▲** or **▼** to switch to the next or previous chapter on a DVD
  - ◀** or **▶** to wind backwards or forwards during playback
  - GO** to enter a choice or setting in a menu



- Without pressing GO in advance, press...**
- DVD** DVD to begin playback of a loaded disc
  - 0 – 9** The number buttons to select DVD titles and chapters or tracks
  - ▲** or **▼** The arrow buttons to move from menu item to menu item
  - ◀** or **▶**
  - MENU** MENU to bring up the main menus
  - GO** GO to resume playback that you have paused or stopped
  - Green button** The green button to select a subtitle language\*
  - Yellow button** The yellow button to bring up the DVD disc menu
  - Red button** The red button to select another audio language\*
  - Blue button** The blue button to bring up the camera angle menu
  - EXIT** EXIT to exit on-screen menus and remove the tool bar
  - STOP** STOP to pause or stop playback completely

*\*Alternative subtitle and audio languages are only available on some discs.*

If your Beo4 remote control does not have a DVD button, press LIST until CDV is shown in the Beo4 display and press GO. For further information about how to add CDV to the Beo4 list, refer to page 7.

# Daily use

Load a DVD and playback starts automatically.

While playing a DVD, use the Beo4 remote control to search at varying speeds, step through the disc, or bring up a DVD disc menu. You can resume playback of a DVD where you stopped last time, unless the loader has been opened in the meantime.

While playing a CD, you can pause playback, switch to a new track, cue back and forth at different speeds or select a track by its number.

*Play and change chapters on a DVD...*

Press to start playing a DVD **DVD**

Press GO then ▲ or ▼ to step to the next or previous chapter **GO**  
▲ ▼

Press GO then ▲ or ▼ repeatedly to jump to another chapter on the disc **GO**  
▲ ▼

Enter the chapter number to step directly to a chapter **1 – 9**

Press GO, then ◀ or ▶ to wind backwards or forwards during playback. Press GO then ◀ or ▶ again to change speed **GO**  
◀ ▶

Press DVD to resume playback **DVD**

*Pause, slow playback or stop playback of a DVD...*

Press STOP to pause playback **STOP**

From pause mode, press GO then ◀ or ▶ to start slow playback. Press GO then ◀ or ▶ to change speed **GO**  
◀ ▶


Press STOP again to stop playback completely, or... **STOP**


Press STOP a third time to return to the beginning of the DVD **STOP**


Press GO to resume playback **GO**


*Some DVDs offer special features which are temporarily available during playback, such as additional film sequences. In such situations, press GO twice in rapid succession to select this special feature.*

*Use DVD on-screen menus...*


Press the green button to bring up the subtitle language menu. Press the green button repeatedly to switch between the available options. When you have made your selection, the menu disappears 

Press the red button to bring up the audio language menu. Press the red button repeatedly to switch between the available options. When you have made your selection, the menu disappears 

Press the blue button to bring up the camera angle menu. Press the blue button repeatedly to switch between the available options. When you have made your selection, the menu disappears 

Press the yellow button to bring up the disc menu 

*In the disc menus...*

Use the arrow keys to move between options in the menus 

Press GO twice to enter your choice or setting **GO**  
**GO**

*While DVD is selected...*

Press GO then 1 to bring up the disc's own top menu\*. Press GO then 1 again to remove the menu

Use the arrow keys to move between options in the menus

Press GO twice to enter your choice or setting

Press GO then 2 to zoom in on the picture. Press GO then 2 to increase the zoom factor. Press GO then 2 a third time to exit the zoom feature

Press GO then 3 to bring up the DVD main menu. This is described on the next page

Press GO then 4 to bring up the status display. Press GO then 4 again to change to the next display. Press GO then 4 a third time to remove the status display

*\*Not all discs contain a top menu.*

*Play and change tracks on an audio CD...*

Press to start playing a CD

Press to step to the next or previous track

Press repeatedly to jump to another track on the CD

Enter the track number to step directly to a track on a CD

*Pause or stop playback of an audio CD...*

Press to pause playback

Press again to stop playback completely

Press to resume playback

*Cue or wind through an audio CD...*

Press to wind back and forth during playback

Press to resume playback

**To play other disc formats:**

Your DVD 1 is designed to play back different disc formats. Supported formats are:

- DVD-Video
- Audio CD
- Video CD
- CD-R/RW
- DVD-R/RW, provided that these are recorded using the DVD Video format and that the disc is finalized.
- Discs containing mp3 files are supported if the sampling frequency is set to 32, 44.1 or 48 Khz.

 
When playing discs with mp3 files, use ◀ and ▶ to change folders and ▲ and ▼ to step between tracks.

## Preference settings

The DVD main menus enable you to select your preferred settings for DVD playback.


In these menus you can, for example, search through a specific title or chapter, repeat playback of a selected section, or enter settings for picture format and language.

For further information about the menus, refer to the chapter *On-screen menus* on page 14.

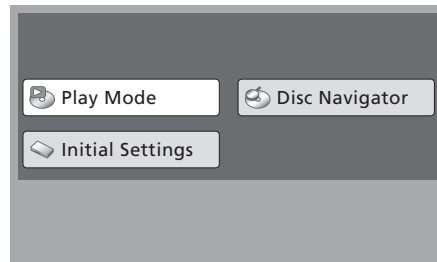

### *How to use the DVD menus...*

 - > Press **GO** then **3** to bring up the DVD main menu.
- > Press **◀** or **▶** to move to the menu you wish to enter and press **GO** twice.
- > Use the arrow keys **◀**, **▶**, **▲** and **▼** to move between menus and settings.
- > Press **GO** twice to store your choice.
- > Press **EXIT** to leave on-screen menus.

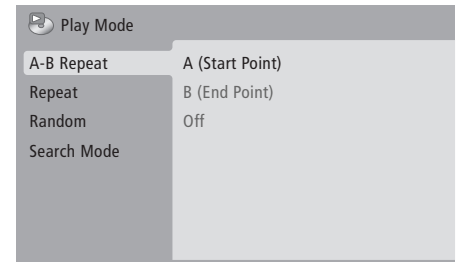

### **What's on the *Play Mode* menu...**

 
The *Play Mode* menu allows you to make selections for playback. The following options are available:

**A-B Repeat...** The A-B repeat function allows you to specify two points on a disc that form a loop to be played over and over.

**Repeat...** The repeat function allows you to repeat a title or a chapter on a disc over and over.

**Random...** The random play function allows you to play titles or chapters on a disc in random order.

**Search Mode...** The search mode function allows you to search through a disc, either by searching for a specific title or chapter, or by searching for a moment in elapsed time on a disc.

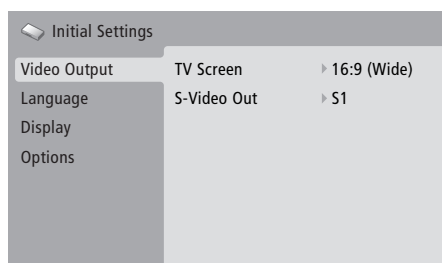

### What's on the *Initial Settings* menu...

The *Initial Settings* menu enables you to choose your preferred settings for DVD playback. Settings in this menu cannot be entered during playback.

The following options are available:

**Video Output...** This menu allows you to select, for example, a picture format suitable for your television.

**Language...** This menu allows you to store your preferred language for audio, subtitles and the disc menu, and to decide whether or not available subtitles should be shown during playback.

 
**Display...** This menu allows you to select the language of the player menus, to decide whether or not status displays should be shown on the screen, and whether the angle indicator should be shown. The angle indicator is only available if the disc contains the alternate camera angle feature.

**Options...** Some DVDs feature a *Parental Lock* level. If you specify a level lower than the one contained on the disc, the disc will not play unless your pincode is entered. Some discs also support the *Country Code* feature. This means that the player does not play certain scenes on a disc, depending on the *Country Code* and the *Parental Lock* level you set. Before you can set the *Parental Lock* level or the *Country Code*, you must enter a pincode. You can change the pincode at any time.

*If you forget your pincode, you must disable the Parental Lock, as described to the right.*

### *If you forget your Parental Lock pincode...*

- > Disconnect DVD 1 from the mains.
- > While pressing and holding the PLAY and ►► buttons, reconnect DVD 1 to the mains.
- > Wait two seconds, then release both buttons.
- > The next time you switch on DVD 1, the Parental Lock will be deactivated.

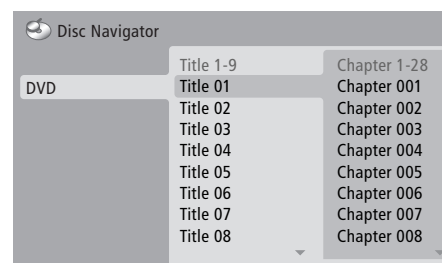

### What's on the *Disc Navigator* menu...

 
The *Disc Navigator* menu allows you to quickly step to specific titles or chapters on a disc.

NOTE! Some DVDs will require you to choose a subtitle language from a disc menu, even if you have previously selected a default subtitle language from the 'Language' menu.

## On-screen menus


In order for you to find your way through the on-screen menus the system offers, this chapter illustrates the overall structure of the menu system.

The chapter also gives you detailed information about the individual menus which offer numerous setting-up and adjustment options.

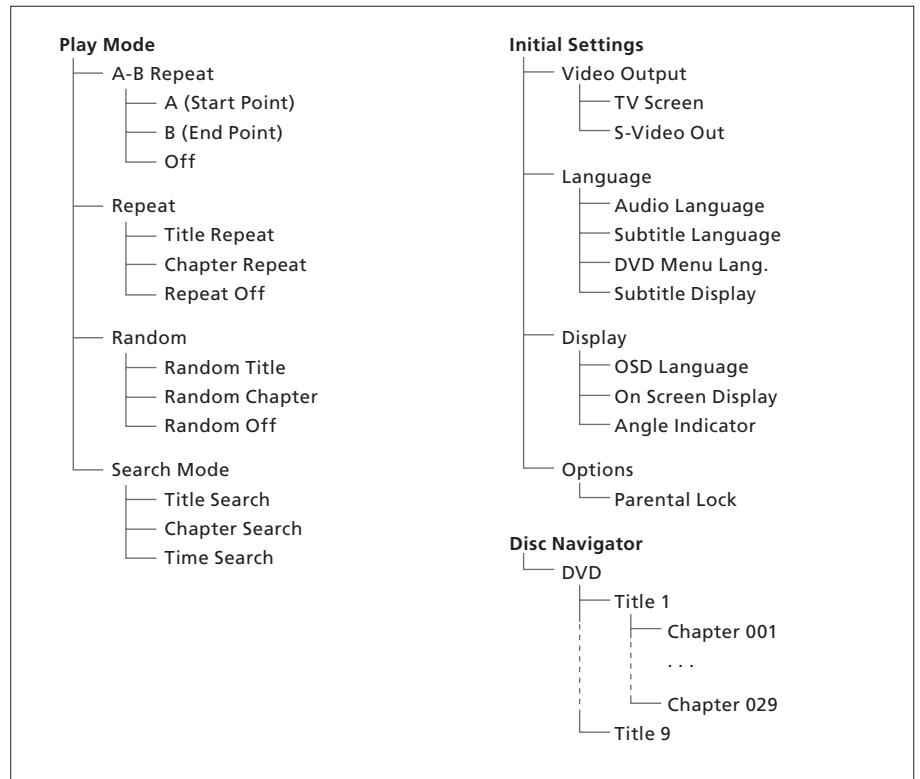

*The extended on-screen menu system for DVD 1.*

 
*Press DVD, then MENU on Beo4 to access the menu system.*

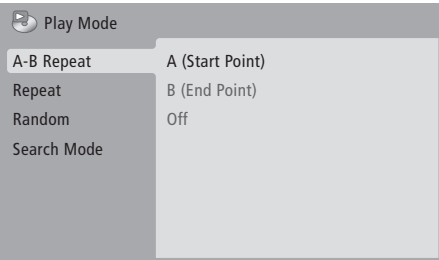

**What's on the *A-B Repeat* menu...**  
The *A-B Repeat* function allows you to specify two points on a disc that form a loop to be played over and over.

When you select the start or end point in the menu, the current playback point is stored. It is not possible to enter a point in playback time with the digit keys.

 
Select *Off* when you no longer wish to repeat playback of the selected section of the disc.

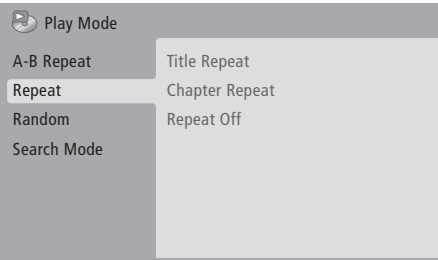

**What's on the *Repeat* menu...**  
The *Repeat* function allows you to repeat a title, chapter or track on a disc over and over.


When you select a title, chapter or track in the menu, the current one is stored. It is not possible to enter a title, chapter or track number with the digit keys.

 Select *Repeat Off* when you no longer wish to repeat playback of the selected section of the disc.

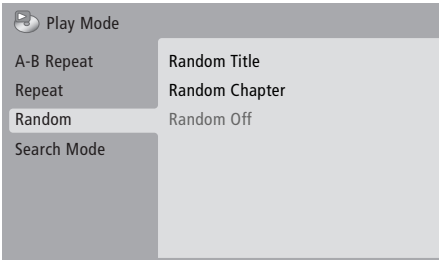

**What's on the *Random* menu...**  
The *Random* function allows you to play titles, chapters or tracks on a disc in random order.

 
Select *Random Off* when you no longer wish to repeat playback of the selected section of the disc.

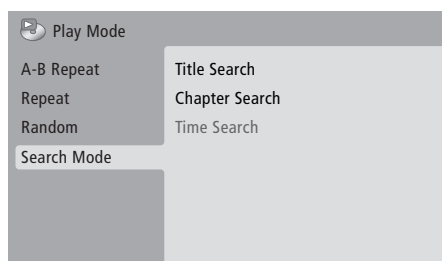

### What's on the *Search Mode* menu...

The *Search Mode* function allows you to search through a disc, either by searching for a specific title or chapter, or by searching for a moment in elapsed time on a disc.

 Use the number buttons, ▲ or ▼ to move to this point in time.

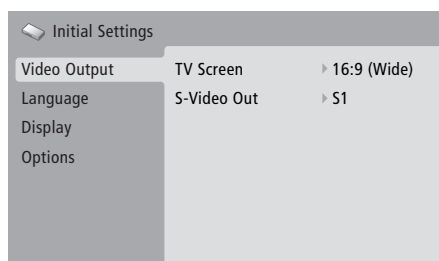


### What's on the *Video Output* menu...

**TV Screen...** Select a picture format for your television. Options are *4:3 (Letter Box)\**, *4:3 (Pan&Scan)* and *16:9 (Wide)*.

**S-Video Out...** Options are *S1* and *S2*. Select *S1*.

 *\*In '4:3 (Letter Box)' the film is shown with black bars at the top and bottom of the screen.*

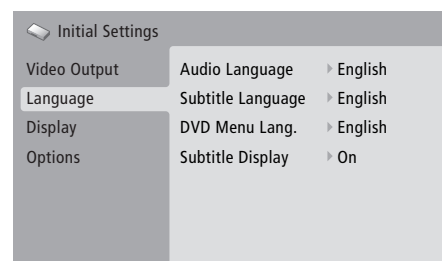

### What's on the *Language* menu...

**Audio Language...** Select the language for audio playback from the languages shown, and if your preferred language is available on your DVDs, then audio playback will be in that language.

 
**Subtitle Language...** Select your preferred subtitle language from the languages shown, and if your preferred language is available on your DVDs, then subtitles will be shown in that language\*.

**DVD Menu Language...** Select your preferred language for the disc menus from the available languages shown, and if your preferred language is available on your DVDs, then the disc menus will be in that language.

**Subtitle Display...** Select whether or not subtitles are to be displayed during playback.

*\*Some DVDs will require you to choose a subtitle language from a disc menu, even if you have previously selected a default subtitle language from the 'Language' menu.*



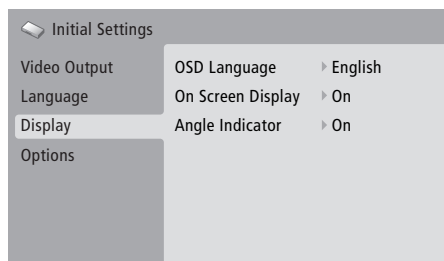


#### What's on the *Display* menu...

**OSD Language...** Select the language for the menus from the languages shown.

**On Screen Display...** Select whether or not status displays are to be shown on the screen. Options are *On* and *Off*.

 **Angle Indicator...** Select whether or not you wish the camera icon to appear on the screen during scenes with multiple camera angles. Options are *On* and *Off*.

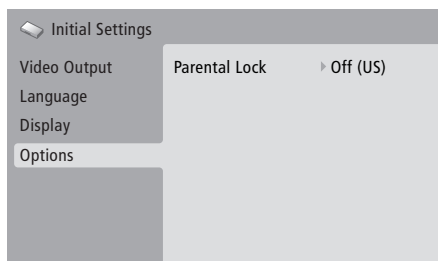


#### What's on the *Parental Lock* menu...

Some DVDs feature a Parental Lock level. If you specify a level lower than the one contained on the disc, the disc will not play unless your pincode is entered.

Some discs also support the Country Code feature. This means that the player does not play certain scenes on the disc, depending on the Country Code you set.

Before you can set the Parental Lock level or the Country Code, you must enter a pincode. You can change the pincode at any time in the *Parental Lock* menu.

 Menus for the pincode, Parental Lock level and Country Code appear when you set *Parental Lock* to *On*. Use the number buttons, ▲ or ▼ on Beo4 to enter your pincode, Parental Lock level and Country Code and press GO twice to store your settings.

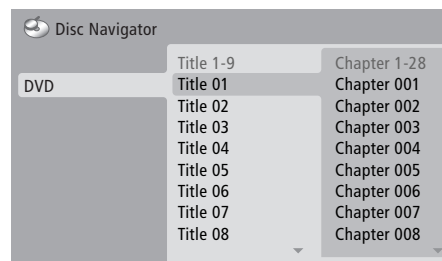

#### What's on the *Disc Navigator* menu...

The *Disc Navigator* menu allows you to quickly step to specific titles or chapters on a disc. Use the arrow buttons to select a title and chapter and press GO twice to start playback.

## Maintenance

Regular maintenance, such as cleaning the system, is the responsibility of the user. To achieve the best result, follow the instructions to the right. Contact your Bang & Olufsen retailer to determine recommendations for regular maintenance.

Any defective parts are covered by the guarantee during the warranty period.

### Cleaning DVD 1

Wipe dust off the surface of DVD 1 using a dry, soft cloth. If necessary, remove grease stains or more persistent dirt with a firmly wrung soft cloth which you have dipped in a solution of water containing a few drops of mild detergent.

Keep the loader closed as much as possible to prevent build-up of dust on the lens. Do not attempt to clean the optics of DVD 1 or open DVD 1 yourself. Leave such operations to qualified service personnel.

*Never use alcohol or other solvents to clean any part of DVD 1!*

### Handling your discs

Handle discs with care. If the disc is always held by its edges and placed in its original cassette when out of DVD 1, no cleaning will be required. Should the disc become soiled by fingerprints, dust or dirt, it can be wiped clean with a lint-free, soft, dry cloth.

Avoid extreme heat and humidity, and never write on your discs.



*No solvents or abrasive cleaners should ever be used on DVDs, video CDs or audio CDs. When cleaning your discs, wipe in a straight line from the centre to the edge.*



# Index

## Beo4 remote control

Introducing Beo4, 9

## Camera angle

Bring up the camer angle menu, 10

## CD

Change tracks on an audio CD, 11

Load and play an audio CD, 8

## Close-up operation panel

The close-up operation panel, 8

## Connections

Connect DVD 1 to your television, 5

## Contact

Contact Bang & Olufsen, 22

## Cue/Wind

On an Audio CD, 11

On a DVD, 10

## Disc

Handling your discs, 18

## Displays and menus

DVD 1 display, 8

On-screen menus – index, 14

## DVD

Bring up the camera angle menu, 10

Disc navigation, 10–11

DVD – Audio language, 16

DVD – on-screen menus, 14–17

DVD operation, 10

DVD – Parental Lock, 17

DVD – Subtitle Language, 16

Load and play a DVD, 8

## Format

What's on the *Video Output* menu, 16

## Language

DVD – Audio Language, 16

DVD – Subtitle Language, 16

What's on the *Language* menu, 16

## Maintenance

Cleaning DVD 1, 18

Handling your DVD discs, 18

## Pause

Pause or stop playback of a DVD, 10

Pause or stop playback of an audio CD, 11

## Picture

What's on the *Video Output* menu, 16

## Pincode

DVD – Parental Lock, 17

## Placement

DVD 1 placement guidelines, 4

## Playback

Change tracks on an audio CD, *11*  
Cue back and forth on an audio CD, *11*  
Load and play a DVD, *8*  
Load and play an audio CD, *8*  
Pause or stop playback of a DVD, *10*  
Pause or stop playback of an audio CD, *11*  
What's on the *Play Mode* menu, *12*  
Wind and rewind through a DVD, *10*

## Random

What's on the *Random* menu, *15*

## Repeat

What's on the *A-B Repeat* menu, *15*  
What's on the *Repeat* menu, *15*

## Search

Search through a DVD, *10*  
Search through an audio CD, *11*  
What's on the *Search Mode* menu, *16*

## Socket panel

Connect DVD 1 to your television, *6*

## Stop

Pause or stop playback of a DVD, *10*  
Pause or stop playback of an audio CD, *11*

## Subtitles

DVD – Subtitle Language, *16*

## Television

Set up DVD 1 with your particular television, *7*

## Tracks

Play and change tracks on an audio CD, *11*



*The DVD Video logo is a registered trademark.*

This product incorporates copyright protection technology that is protected by claims of certain US patents and other intellectual property rights owned by Macrovision Corporation, and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997. All rights reserved.

### For your information...

Your needs as a user are given careful consideration during the design and development process of a Bang & Olufsen product and we strive to make our products easy and comfortable to operate.

Therefore, we hope that you will take the time to tell us about your experiences with your Bang & Olufsen product. Anything which you consider important – positive or negative – may help us in our efforts to refine our products.

**Thank you!**

**Write to:** Bang & Olufsen a/s  
Consumer Service  
dept. 7210  
Peter Bangsvej 15  
DK-7600 Struer

**or fax:** Bang & Olufsen  
Consumer Service  
+45 97 85 39 11 (fax)

**or e-mail:** beoinfo1@bang-olufsen.dk

**Visit our Web-site on...**  
[www.bang-olufsen.com](http://www.bang-olufsen.com)



*This product fulfils the conditions stated in the EEU directives 89/336 and 73/23.*



The label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case any difficulties arise with the compact disc player, please contact a Bang & Olufsen retailer. The apparatus must be opened by qualified service personnel only.

**CAUTION:** The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure. The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD Player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only. Laser radiation when open. Do not stare into beam. This label is located on the rear enclosure.





3508795040300002